


Cross Section Monitor CS-05W

No need of resin hardening!
Sample making to analysis for 5 min.

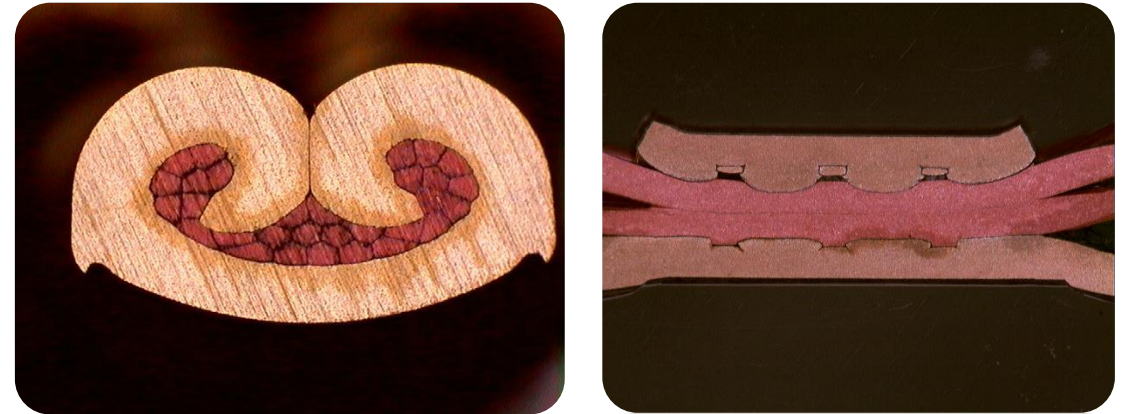

Sample of crimped terminal can be cut, ground and done with electrolyte etching. The finished samples' cut faces are visually monitored and analyzed. All processes are compactly arranged in the compact system. Even the hardened samples and insulation barrel cut samples are available, too.

Highest class software X-Scan
analyzes crimp cross-section


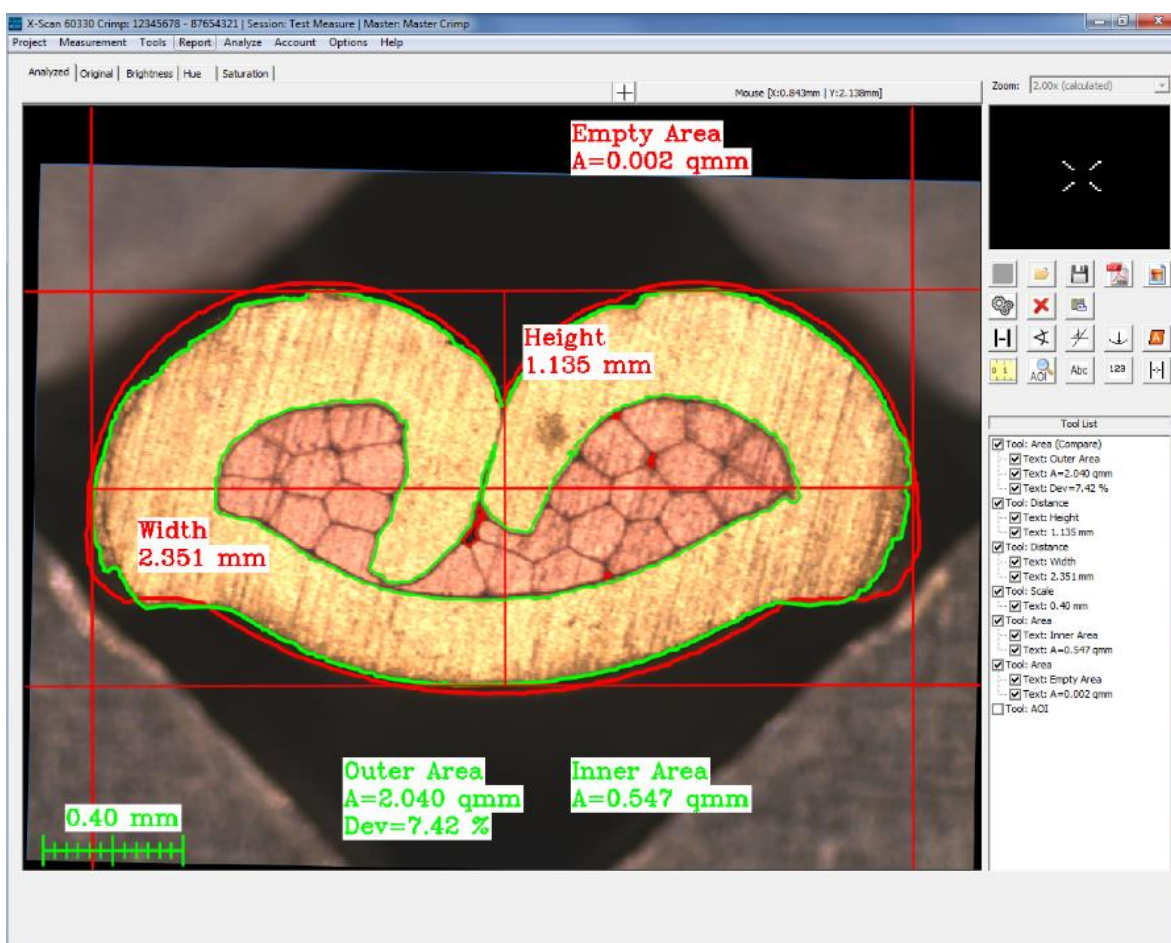


Image monitoring and analyzing can be processed easily. Crimp height, Crimp width, Compound ratio, etc. are measured automatically. World top car makers' templates for report are pre-installed. This is the world standard software.

Electrolyte Etching Unit
CEL-02 (Option)



Safety of solution is the good feature of this etching. It performs etching process within 10 seconds with beautiful finishing.

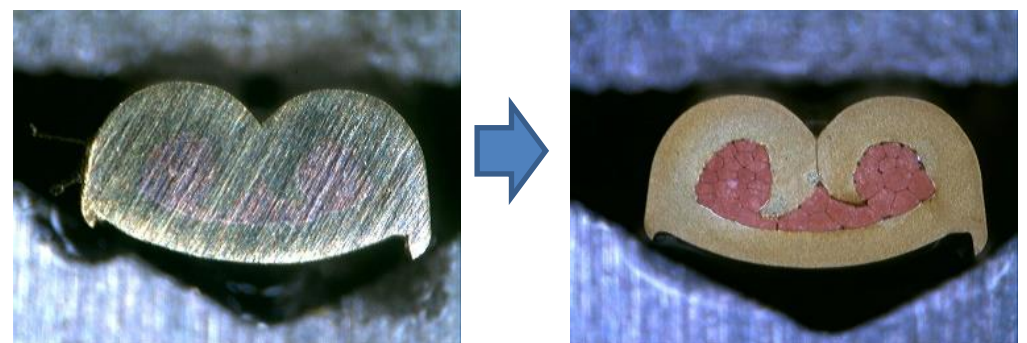

TRUESOLTEC CO., LTD.
100% Quality Inspection